

VALTAMER


Alltab®

Quick Start Guide

For Alltab 4 models with silicone oil filling



VALTAMER

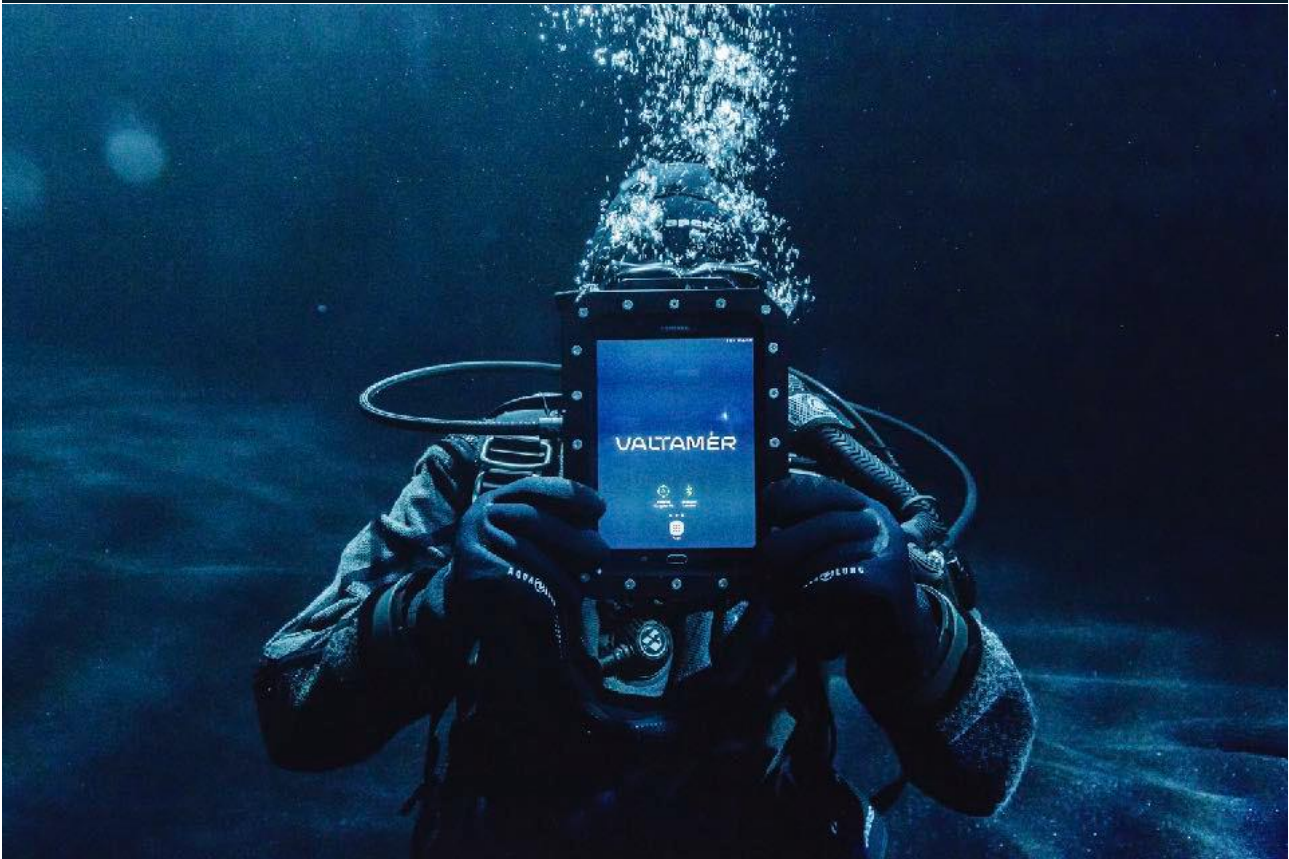

Alltab

The Alltab® underwater tablet brings data collection and underwater navigation to the 21st century. Our patented technology allows you to use the touchscreen and the tablet's applications underwater. For the best user experience, we've designed specific software for divers to use underwater with the Alltab. The touchscreen can be operated with bare hands, gloves or a stylus.

Alltab Buttons and USB Port

- To turn on the tablet, hold the power button for 3 seconds.



Power button / Unlock and lock screen

VALTAMER



Charge Alltab by using the magnetic USB pogo-pin cable.

The magnets will guide you to correct orientation.

Make sure all surfaces are dry and clean before connecting the cable!



Overview:
Access
recently used
applications.

Home:
Return to
home screen

Back:
return to
previous
screen

Turning off power

- Swipe down from the top
- Choose "Power" icon
- Change side button settings to summon Power Off -menu by pressing and holding the power button

Touchscreen usage underwater

- Push gently on the flexible membrane until you reach the tablet screen.
- Swipes can be used also.
- Touch screen works best with bare fingers.
- Divers' gloves can also be used. Best results are achieved with the shape and size of a finger.
- For large gloves, glue round pieces of rubber on to the thumbs, 8-10 mm in diameter, 2 mm thick
- A round and firm rubbery head works well for a stylus when wearing thick gloves while underwater.
- Do not use sharp objects on the screen.

VALTAMER

Maintenance

- Always rinse Alltab with fresh, clean water after use – preferably by sinking it in for a few minutes.
- Make sure the USB/charging port is completely dry inside before plugging in the charger cable.¹
- To avoid scratches, do not swipe the membrane with hard materials, such as sand.
- Do not use hard materials, such as metal to push the membrane. Damages caused by punctures are not covered by warranty.
- A small amount of air may be left inside the tablet during the current production process. This does not disturb the performance of Alltab and is no cause for alarm.
- If the touch screen does not respond properly while underwater and the transparent membrane has lost tension, add silicone oil through one of the two purge holes in the long sides of the Alltab. The Valtamer Purge Adapter helps to connect the oil bottle or syringe and to remove air bubbles. Top up without pressing the membrane, and the touch screen functionality should return to normal.



Buoyancy

- Alltab is negatively buoyant.
- Cable reel of Valtamer UNS provides additional buoyancy when attached to the back of Alltab

Contact us

Mr. Jouni Leinikki, CEO

By:

- E-mail: sales@valtamer.com
- Mail: Veneentekijäntie 4, FI-00210 Helsinki, Finland
- Phone: +358 45 679 0300



¹ Water, especially salt water in the connector will cause corrosion to the pins when charger is connected. This does not happen if the connector is dry or when the USB port is unplugged while diving. Corrosion damages are not covered by warranty.